

# Plis Outdoor

**Design by Ramos & Bassols** 

## ASSEMBLY INSTRUCTIONS

#### CAUTION: TO AVOID POSSIBLE ELECTRICAL SHOCK, MAKE CERTAIN ELECTRICITY IS SHUT OFF AT MAIN PANEL BEFORE WIRING All wiring must be in accordance with national and local electrical codes. If you are not familiar with wiring, you should use a qualified electrician.





LIGHT IS CREATION

|   |                | 4030  |
|---|----------------|-------|
| 1 | Allen Key      | 1 un. |
| 2 | Lamp structure | 1 un. |

### TECHNICAL SPECIFICATIONS

4030. Net Weight 65,03 lbs 🐠 2 x PL-T GX24q-3 Triple Tube 26W 🛓 IP64 🛞 🗸



1.

Class I. Product with an additional protection cable (grounds).

IP64 Dust-tight product. Protected against water

Product that CAN be in contact with normallyflammable materials (wood or others).

#### Caution

Before assembling and installing this product, carefully read the following:

-Never use a bulb with a wattage exceeeding the recommended one. Always use a bulb with the recommended wattage or lower.


-If you wish to fix the lamp to the ground, choose the most adequate plugs and screws depending on the surface.

-Before the installation, make sure the installation surface will not be damaged. If this happens, it will be the installator's responsibility.

-If the steel cable or the power cord of this lamp is damaged, it must be replaced only by the manufacturer or their technical service or by a person capacitated to this effect to avoid any risk.

-We recommend reading the manual before installaing the lamp. Keep this instructions for future reference.

#### ASSEMBLY INSTRUCTIONS

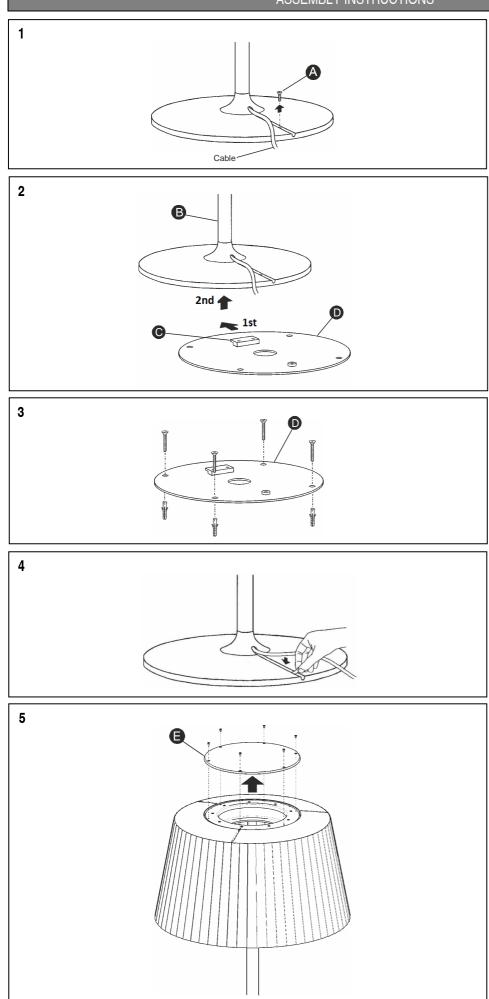

#### Maintenance

-Use a slightly-wet cotton cloth for cleaning.

-In case of malfunction or damage, please contact the retailer who sold the lamp.

#### IMPORTANT NOTICE:

Caution: to avoid possible electrical shock, make certain electricity is shut off at main panel before wiring.

**NOTE:** Please, follow these instructions just in case you need to fix the lamp to the ground. If you do not need it to be fixed to the ground, skip steps 1 through 4 and go directly to step 5, making sure that the chose place is close to an outlet.

1. Move the cable sideways and remove the screw (A) located in the opening by means of the supplied Allen key.

Important: Do not do this if the lamp is leaning or lying on the ground. It must be vertical.

2. Hold strongly on the body of the lamp (B) and, following the arrows, move the lamp towards the opposite side of the cable till it comes loose from the anchorage device (C) and then pull it upwards to separate it from the base (D).

**3.** Fix the base (D) to the ground using the most adequate screws and plugs (not supplied).

Replace the lamp (B) following the instruction of step 2 backwards, making sure the lamp is firmly joined to the anchorage device (C), and fix it in place by tightening the screw (A).

**4.** Remove the adhesive protector in the opening before replacing the cable.

5. To install and maintain the bulbs unscrew the 6 screws with supplied Allen key to free the disc (E). Once finished, fit the disc with the screws, screw them uniformly and tighten to ensure water tightness.

IMPORTANT: MAKE SURE THE LID IS FIRMLY CLOSED TO AVOID MOISTURE.

## **Plis Outdoor**

Design by Ramos & Bassols



## UNPACKING



