




# Contemporary Lighting

PRODUCT NAME LARMES

ITEM NUMBER: E20116-18


Please consult your electrician for hanging fixture and wiring.

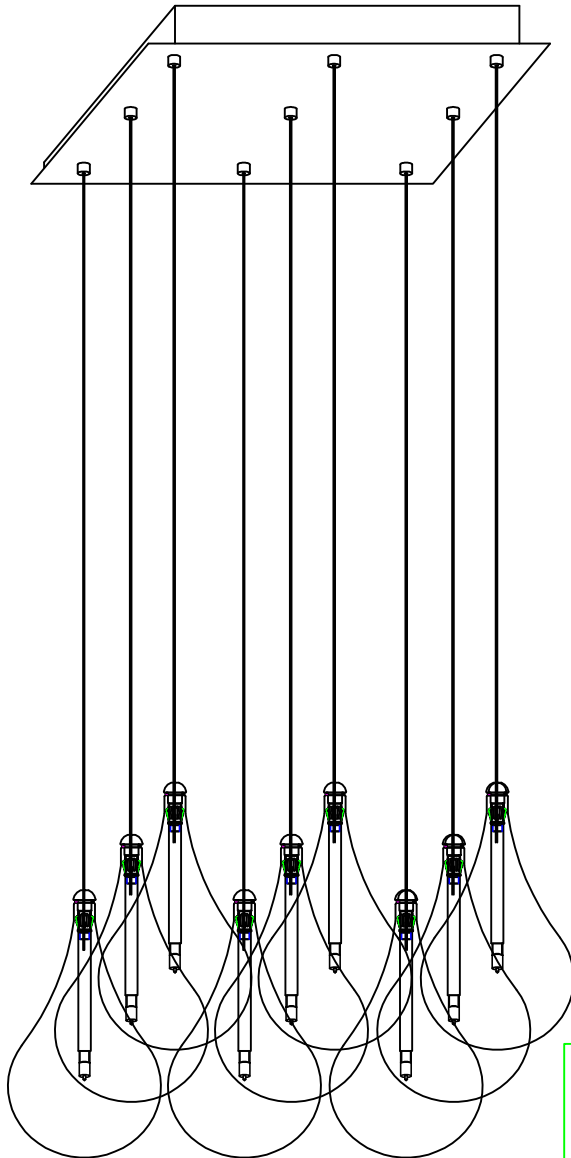



**WARNING:** Wires need to be connected to transformer found in canopy and should not be connected directly to power source or a short may occur

**Caution:** Xenon bulbs get very hot and may burn you. Always make sure bulbs are off for a minimum of 10 minutes before handling. Fixture may be dimmed using an electronic low voltage dimmer.


**IMPORTANT:** Turn off the power at the main fuse or circuit breaker box before starting installation

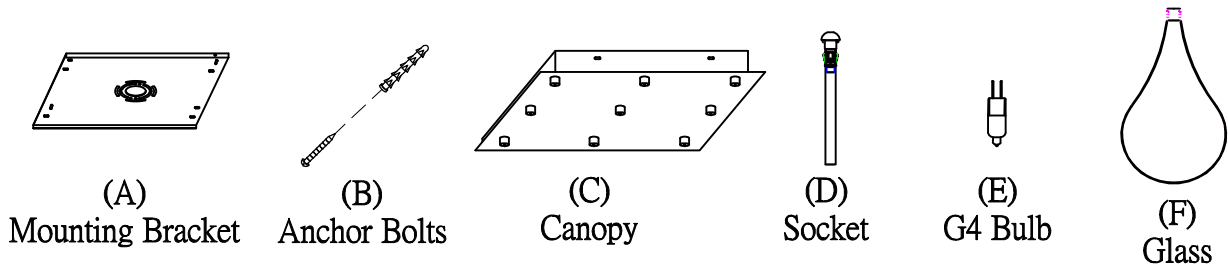


Locate all hardware & components before discarding packaging

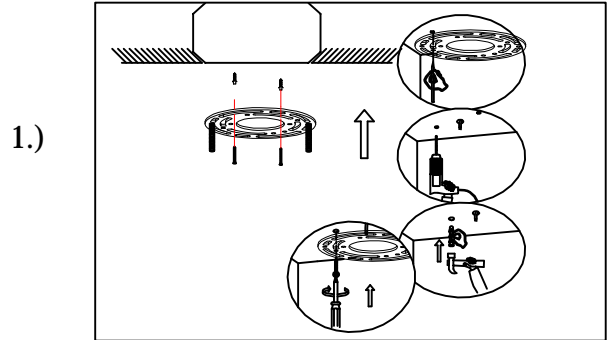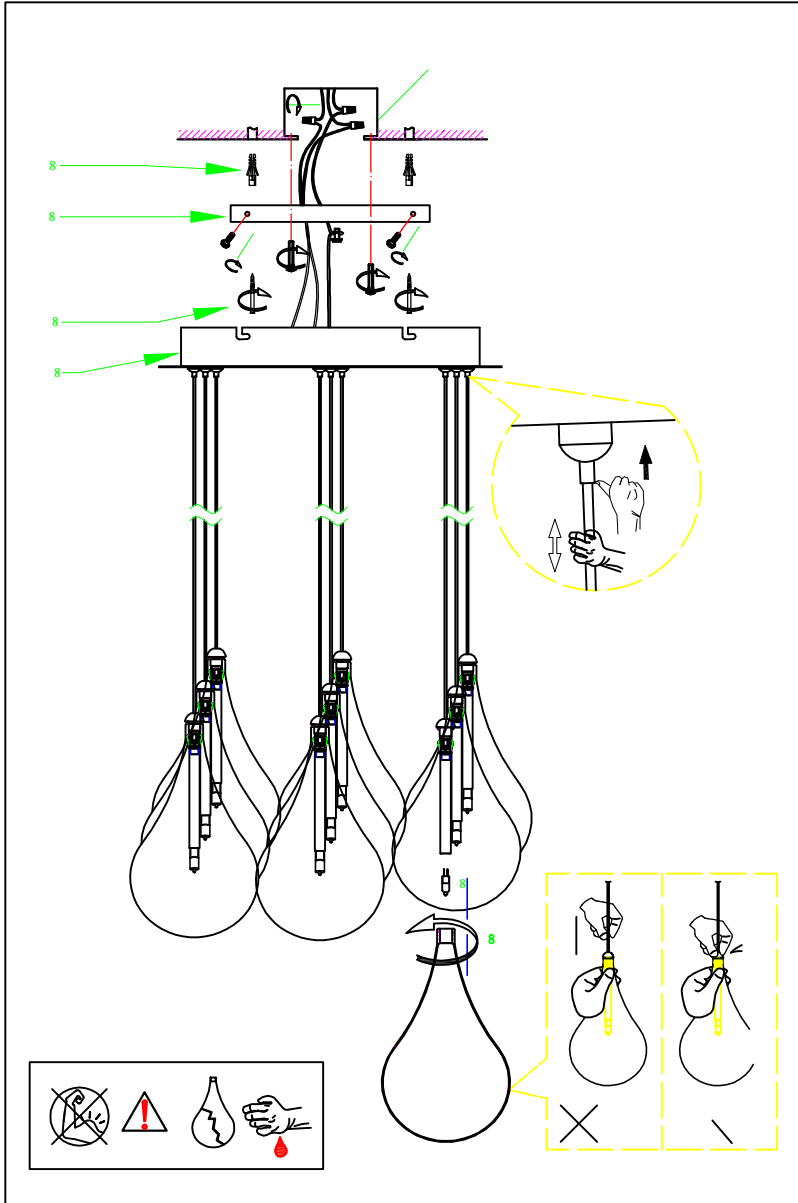


**Step.1:** Remove mounting bracket (A) and install to electrical box. Mark where anchors meet ceiling, remove mounting bracket from ceiling, and then drill holes using 3/16" drill bit where marked (B). Install mounting bracket and attach anchors to secure bracket at ends.

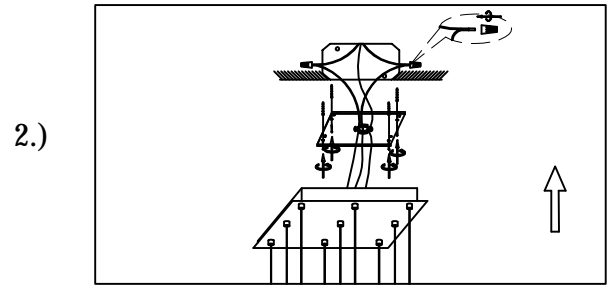

**Step.2:** Wire fixture to wires in outlet box. Green wire is for Ground.

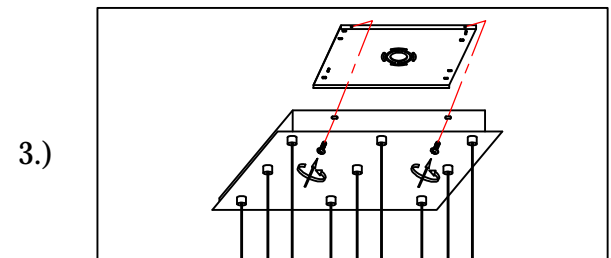

**Step.3:** Tighten screws (D) on the sides of the canopy (C) to secure the fixture.

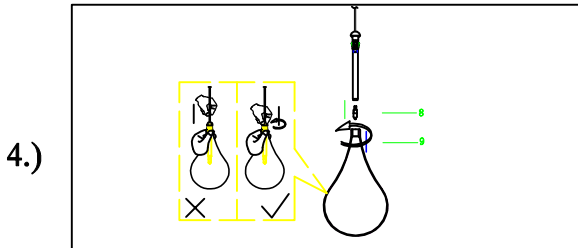

**Step.4:** Install G9 bulb (E) provided. Gently turn glass (F) onto socket (D) to secure.

**Cleaning & Care:**

Clean with soft cloth and a mild detergent.  
Do not use abrasive cleaner.