
ASSEMBLY INSTRUCTIONS



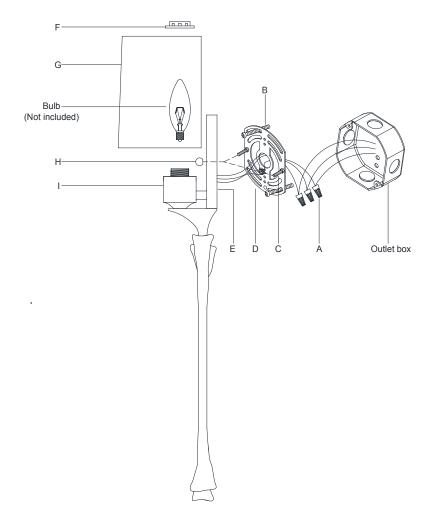

Item # ARN 2080

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING***SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIALLY UNTIL INSPECTION AND INSTALLATION ARE FINAL.

- 1. Carefully remove all parts from the box.
- 2. Remove the mounting plate (D) from the backplate (E) by loosening ball nuts (H).
- 3. Affix mounting plate (D) onto the outlet box and secure with mounting screws (B).
- 4. Connect ground wire from the fixture (bare copper) to ground wire from the outlet box (usually green or copper in color) using wire nut (A).
 - IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.
- 5. Connect the neutral wire (WHITE) from the fixture to the wire from the outlet box (usually WHITE) using wire nut (A).
- 6. Connect the hot wire (BLACK) from the fixture to the hot wire from the outlet box (usually BLACK) using wire nut (A).
- DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
- 7. Attach the backplate (E) onto the mounting plate (D). Let screws (C) pass through the holes on the fixture then secure with ball nuts (H).
- 8. Remove the socket ring (F) from the socket.
- 9. Attach the shade (G) to the socket cup (I) and secure with socket ring (F).
- 10. Insert bulb (not included) into the socket.
- 11. Installation is complete, turn on power at fuse or circuit breaker.









^{***}Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.