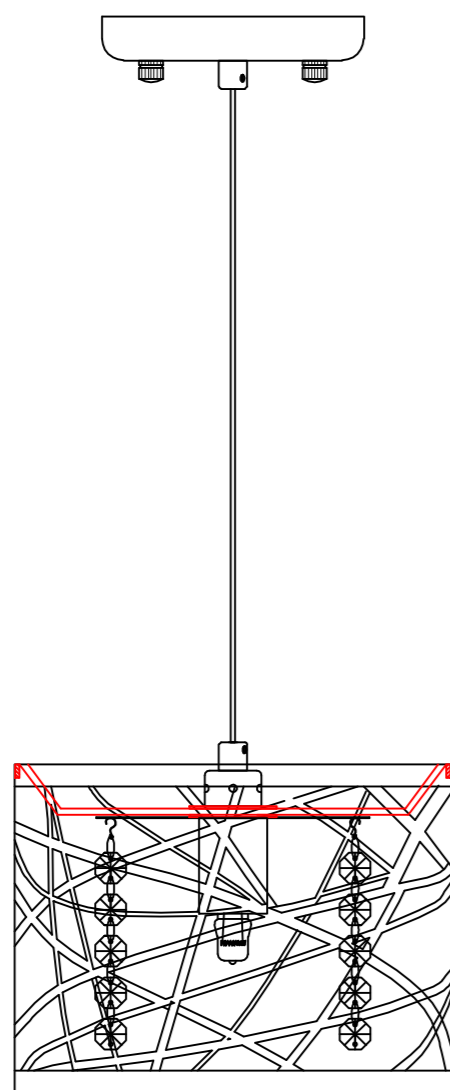


# Contemporary Lighting

PRODUCT NAME: Inca  
ITEM NUMBER: E21306-10BZ

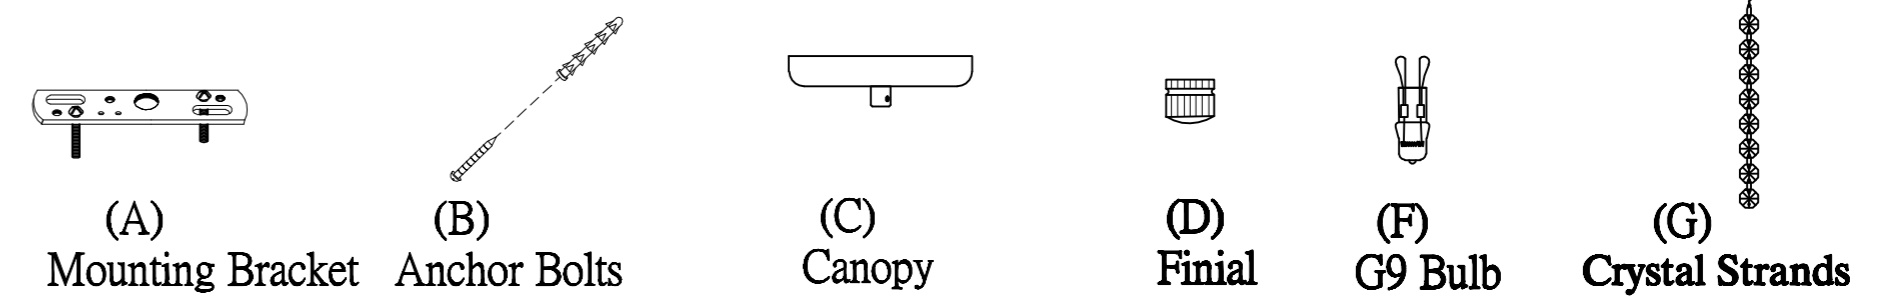
Please consult your electrician for hanging fixture and wiring.




**Caution:** Xenon bulbs get very hot and may burn you. Always make sure bulbs are off for a minimum of 10 minutes before handling. Fixture may be dimmed using an electronic low voltage dimmer.

**Bulbs (Included): G9X40W**





**IMPORTANT:** Turn off the power at the main fuse or circuit breaker box before starting installation



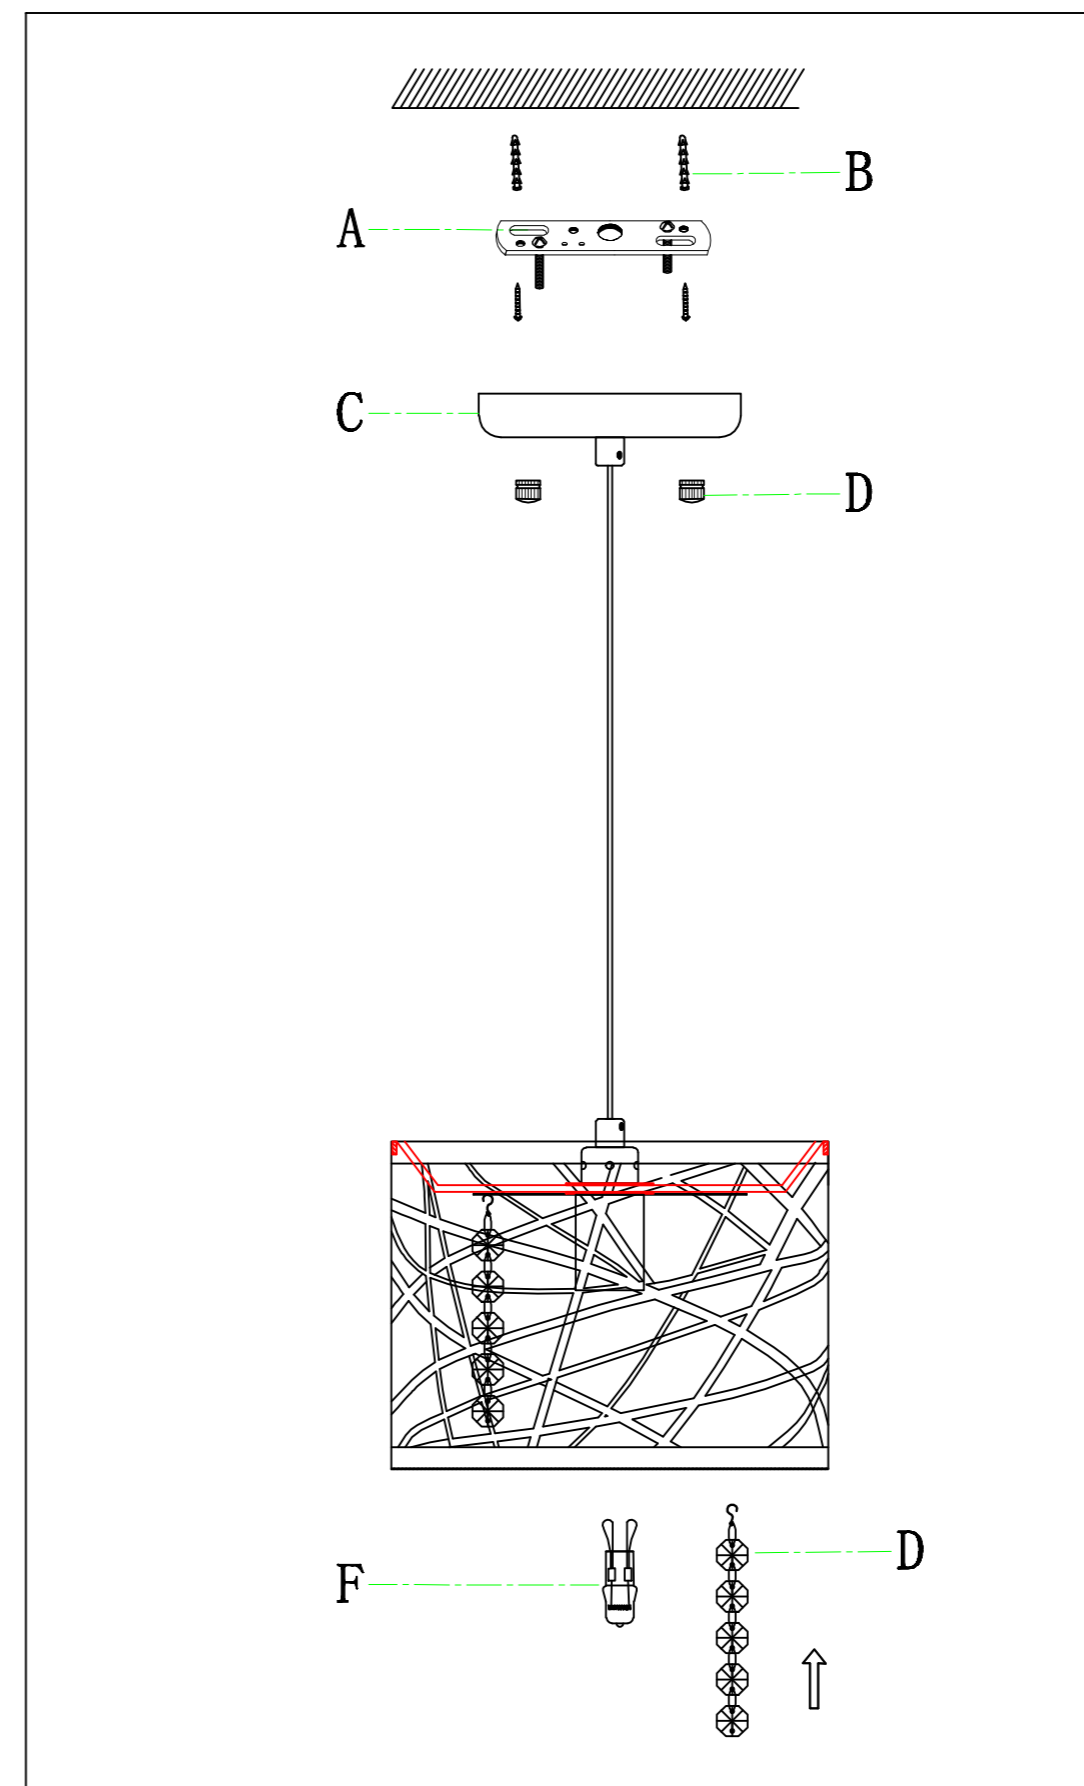Locate all hardware & components before discarding packaging



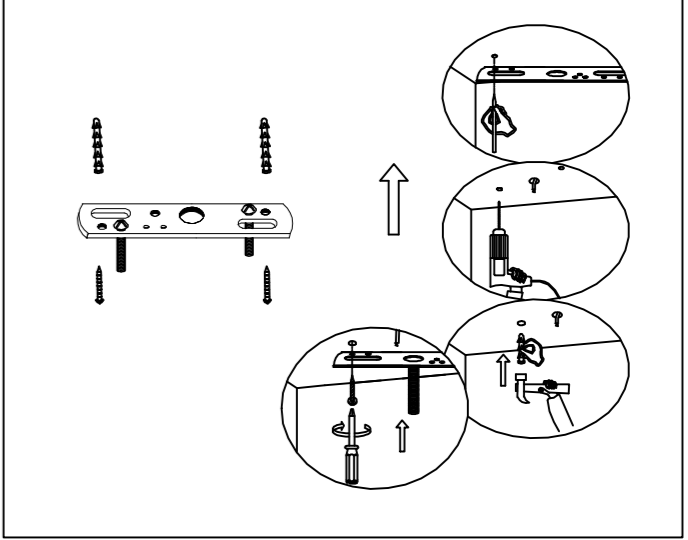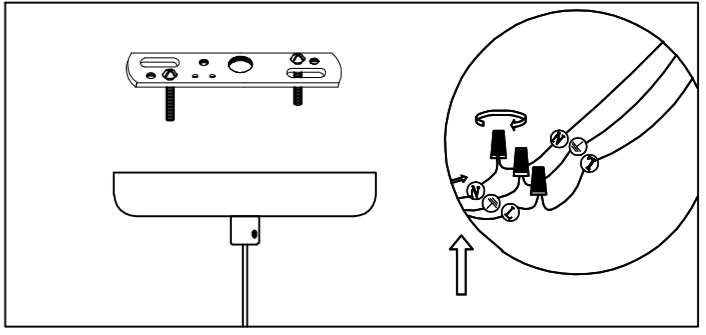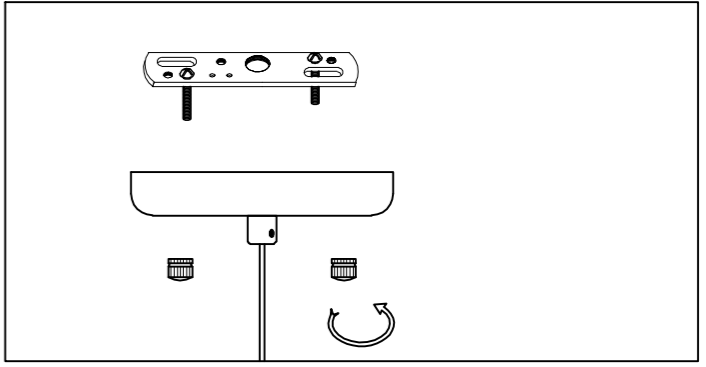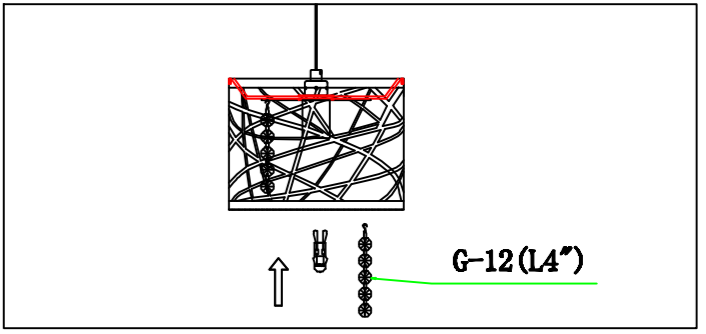**Cleaning & Care:**  
Clean with soft cloth and a mild detergent.  
Do not use abrasive cleaner.

- 1.)   
**Step.1:** Remove mounting bracket (A) from Canopy (C) to install to electrical box
- 2.)   
**Step.2:** Wire fixture to wires in outlet box. Green wire is for Ground.
- 3.)   
**Step.3:** Screw finials (D) onto mounting bracket (A) until canopy is flush with ceiling. Adjust the wire to desired length according to Page 3.
- 4.)   
**Step.4:** Install G9 bulbs (F) and hang Crystal strands(G)