



# 

## DISCONNECT POWER BEFORE RE-LAMPING OR WIRING THE FIXTURE READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.

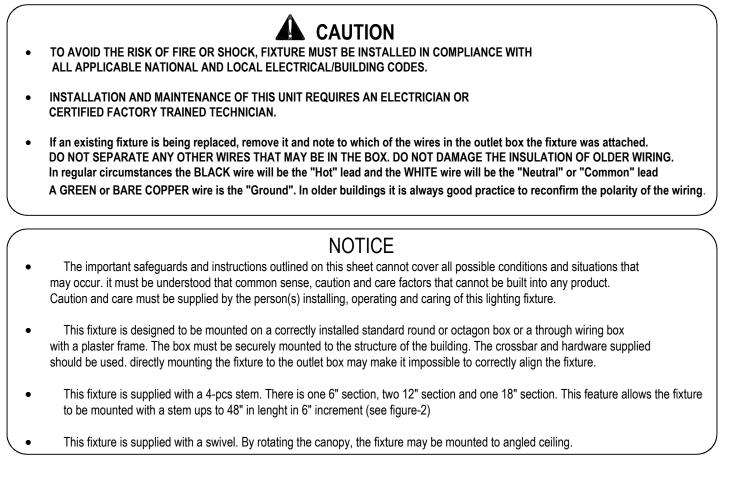

#### FIXTURE PREPARATION


1. Remove the fixture, shell/crystal strands, parts and parts bag(s) from the carton.

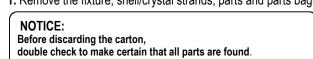

- Determine the overall desired length of the fixture. Thread the leads and ground wire through each stem section and the loop at the top as the are assembled.
- 3. Measure 6" of lead wire beyond the top of the screw collar loop. Cut off the excess wire. Strip the insulation off the ends of the leads exposing approximately 1/2" of wire. Twist the strands of wire together.

### FIXTURE INSTALLATION

1. Thread the nipple into the crossbar and the nut onto the nipple. Attach the crossbar to the outlet box. (The green screw should face the floor).

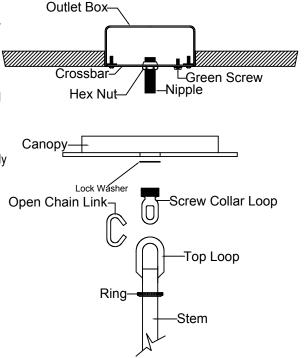

- 2. Adjust the nipple so that it extends 1/4" beyond the canopy. Lock the hex nut against the crossbar. Thread the screwcollar loop onto the nipple.
- 3. Place the canopy over the screw collar loop. Using the screw collar ring, temporarily secure the canopy in place.
- 4. Using the open link of the chain, hang the fixture on the screw collar loop. Using the chain pliers, close the chain link.

# A WARNING

The use of chain pliers for opening and closing links of chain is required. The use of tools other than chain pliers may damage the chain link resulting in a failure which can cause harm to the fixture, property, and/or person(s). TIP: If using regular pliers to close the link, place a cloth around the link or wrap the jaws of the pliers with tape to minimize damage to the finish.

- 5. Unscrew the ring from the screw collar loop. Let the ring from the screw collar loop. Let the ring and canopy slide down the stem.
- 6. Feed the leads and ground wire up through the screw collar loop and the nipple into the outlet box.
- 7. Fasten the ground wire to the green or bare copper wire in the outlet box or green screw on the crossbar.

# WARNING

Never fasten the ground wire to the black or "hot" wire. Failure to follow this instruction could result in serious injury or death!

8. Fasten the white fixture lead to the white wire in the outlet box. Fasten the wires together with an approved fastener (wire nut). Starting about 1" below the fastener, tightly wrap the connection with electrical tape so that the connections seals the end of the fastener.

Electrical tape

-Approved fastener ( wire nut )

## 🕭 WARNING

Make sure that there is no exposed wire or strands that could cause a dangerous short circuit!

- 9. Connect the black fixture lead to the black wire in the outlet box. Fasten the joined wires as in step 8.
- 10. Lift the canopy and screw collar loop to the ceiling. Tighten the ring to hold the canopy in place.
- 11. Attach the capiz and crystal chains at the locations indicated on the illustration on the first page.
- 12. Install the lamps (light bulbs). NOTE: This fixture is rated for 60 watt type B, BA, C or CA lamps.

## **WARNING**

DO NOT EXCEED RECOMENDED WATTAGE! To save energy, 13 watt spiral fluorescent lamps may be used

13. Restore power to circuit at breaker or fuse box.

